

A. Model 115

Tightening torque


Nm

Nuts for immersion tube transmitter

3.5-4


Removal

- 1 Take trunk floor mat from trunk and remove closing cover from floor of trunk.
- 2 Pull coupling (1) from immersion tube transmitter (2).
- 3 Unscrew fastening nuts and pull out immersion tube transmitter.
- 4 Remove gasket from fuel tank, making sure that no remains of gasket are dropping into tank.

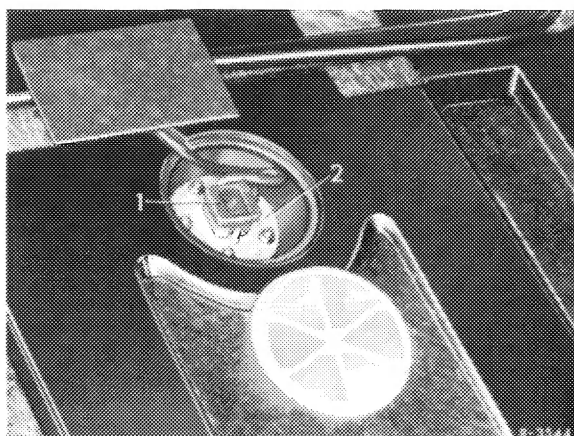

Installation

- 5 For installation proceed vice versa as follows:
 - a) Use new gasket.
 - b) Prior to installing immersion tube transmitter, remove locking pin (arrow).
 - c) Plug on coupling and check operation of fuel readout.
 - d) Tighten nuts crosswise to 3.5-4 Nm.
 - e) Insert plug for fuel readout.
 - f) Check for leaks.

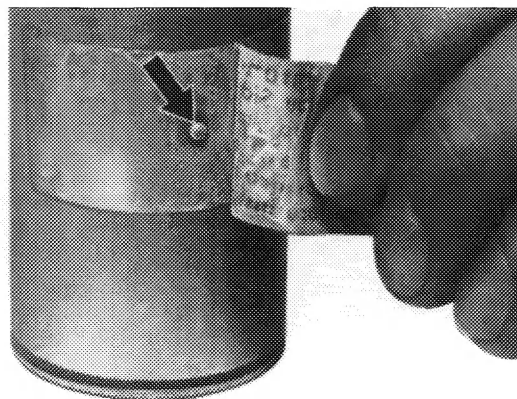

107-10702

B. Model 123 sedan and coupe

Tightening torque


Nm

Immersion tube transmitter

35–43


Removal

- 1 Remove first aid kit and first aid kit holding tray (arrow).

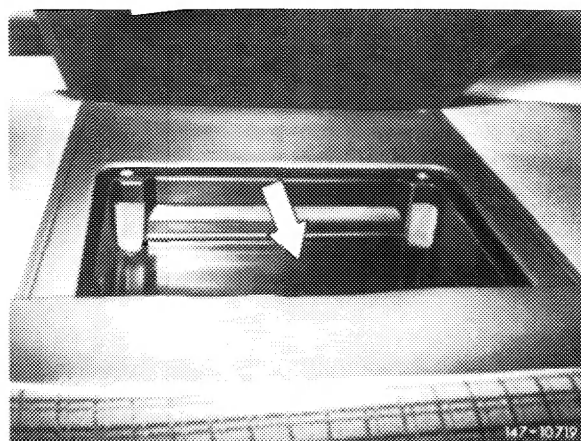


- 2 Pull off coupling (66) for fuel gage (fuel readout) on immersion tube transmitter (65) and protect with a wire against slipping off.

- 3 Unscrew immersion tube transmitter.

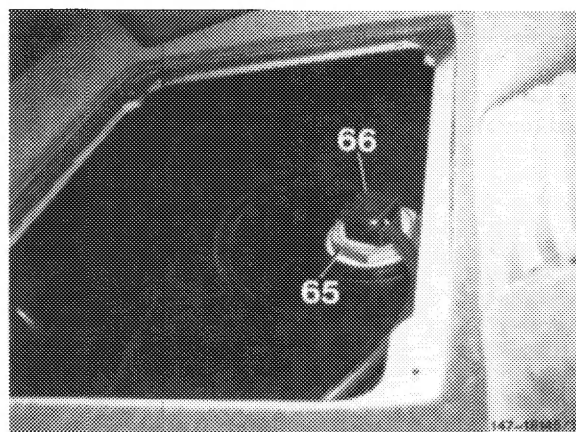


Installation

- 4 For installation proceed vice versa as follows:
 - a) Use new rubber sealing ring.

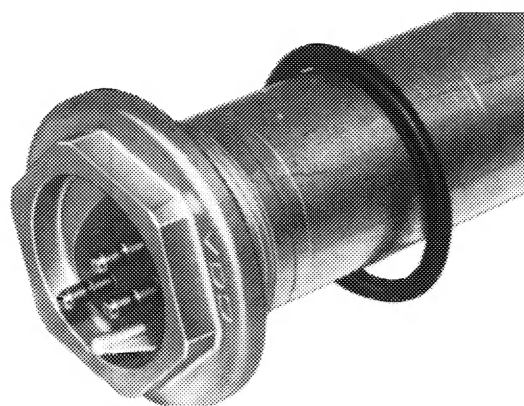

- b) Prior to inserting immersion tube transmitter, remove locking pin (arrow).
- c) Insert coupling and check operation of fuel gage (fuel readout).
- d) Install immersion tube transmitter and tighten to 35–43 Nm.
- e) Insert coupling for fuel gage (fuel readout).
- f) Check for leaks.

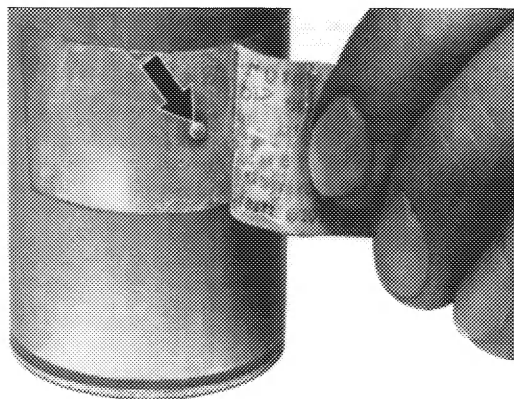


107-10702

C. Model 123 T-sedan and special vehicles with special body

Removal

- 1 Loosen cargo room floor by turning tommy lock and remove.

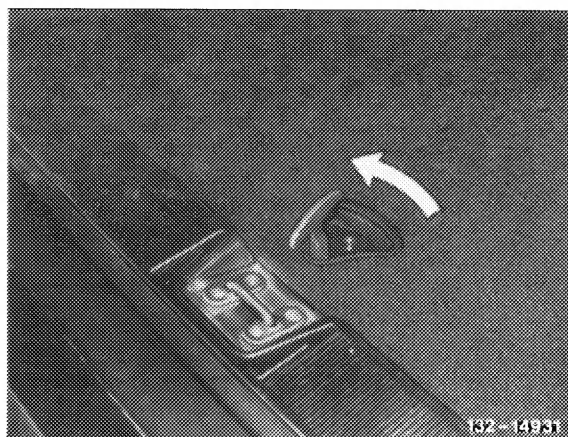

- 2 Remove tray.

